

**LSB33,LSB36**

**ASSEMBLY INSTRUCTIONS**

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint right side panel with right back panel

STEP 2: Fix the bottom panel on

STEP 3: Joint right side panel with right back panel

STEP 4: Attach toe-kick on


STEP 5: turn the carcass stand

STEP 6: Insert back panel through the groove












STEP 7: Attach face frame(long and short), then screw up









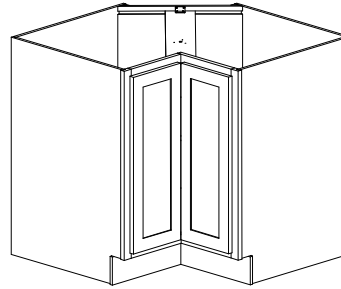
STEP 8: Attach top connect strip using screw and install plastic block

STEP 9: Hinge the door onto the face frame and adjust the cover-space



PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	TOE KICK	1
F	FACE FRAME	1
G	FACE FRAME	1
H	CONNECT STRIP	1
I	BACK PANEL	1
J	ADJUSTABLE SHELF	1
K	CABINETS DOOR	2

11	135 DEGREE HINGE	2	 135° hinge
10	3/4" ROUND HEAD SCREW	8	 3/4" round head screw
9	BUMPER	4	 Bumper
8	165 DEGREE HINGE	2	 165° hinge
7	SHELF CLIP	6	 Shelf clip
6	9/16" ROUND HEAD SCREW	72	 9/16" round head screw
5	DOWEL	6	 Dowel
4	1" FLAT HEAD SCREW FOR CARCASS	11	 1" flat head screw
3	CLEAT	18	 Cleat
2	Plastic Block	4	 plastic block
1	9/16" flat head screw	8	 9/16" flat head screw
NO.	Description	QTY	PICTURE

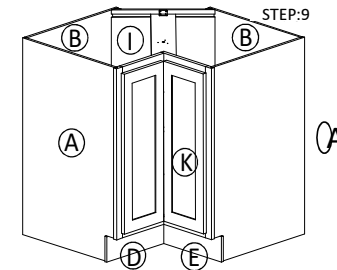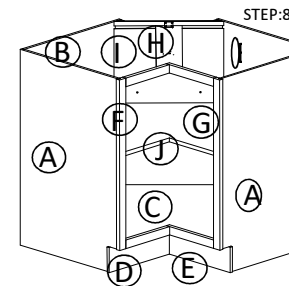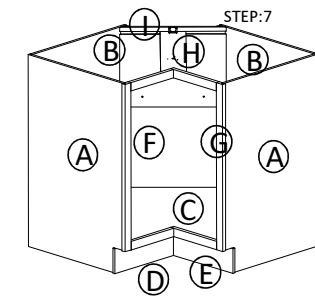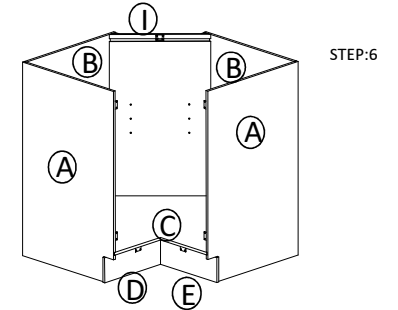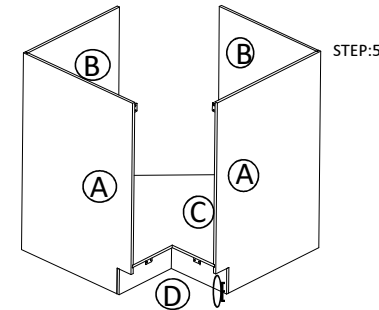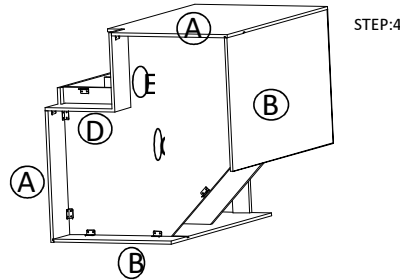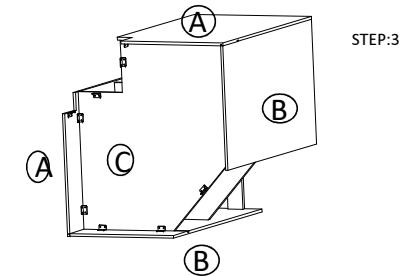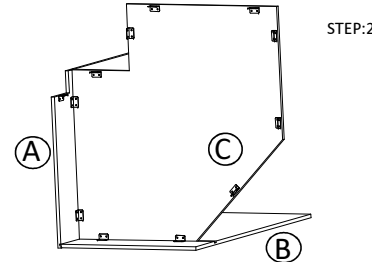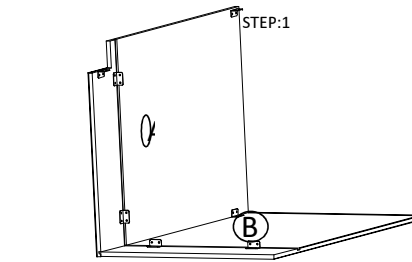

HARDWARE LIST